

### 9. 21. 1MIX1-5

# **AIRPLANE**



Under the state of the initial picture, press MENU key forlong, access the main menu.

-

Press UP/DOWN key select the FUNC SETTING menus, and press MENU key for short into next submenu.

Press UP/DOWN key choose PROG.MIX menu, press MENU key for short and enter the page to establish.

Press UP/DOWN key to choose the MIXI menu, press MENU key for short into next subnenu.

Press UP/DOWN key to choose the MIX1 screen.

Press "+"or"-" key to change the select value.

Press MENU key for short to keep result and return last menu. press EXIT key for short to not keep and treurn to last menu.



#### MIX1-5:

Mix purpose to accuse of form to get rid of little mistake of organism, make it is it can take the heart conveniently even more to have not to handle. The very wanton one mixes accusing of among the channel.

INH: disable the function.
ACT: enable the function.

MASTER: select intput channel.

SLAVE: select output channel.

SW: NOR/IDL1, IDL2, ON.

Press the  $\boldsymbol{UP}$  or  $\boldsymbol{DOWM}$  key to select the MIX1 screen.

Press "+"or"-" key to change the select volue.
Press the **MENU** key to save and return last

menu

Press the **EXIT** key to not keep and return last

## 9. 21. 2MIX6-7

**AIRPLANE** 

### STEPS:

Under the state of the initial picture, press MENU key forlong, access the main menu.

Press UP/DOWN key select the FUNC SETTING menus, and press MENU key for short into next submenu.

Press UP/DOWN key choose PROG. MIX menu, press MENU key for short and enter the page to establish.

Press UP/DOWN key to choose the MIX6 menu, press MENU key for short into next subnenu.

Press UP/DOWN key to choose the MIX6 screen.

Press "+"or"-" key to change the select value.

Press MENU key for short to keep result and return last menu. press EXIT key for short to not keep and treurn to last menu.



#### MIX6-7:

Mix purpose to accuse of form to get rid of little mistake of organism, make it is it can take the heart conveniently even more to have not to handle. The very wanton one mixes accusing of among the channel.

INH: disable the function. ACT: enable the function.
MASTER: select intput channel.

SLAVE: select output channel.

SW: NOR/IDL1, IDL2, ON.

CURVE: curves have five adjustable points-low, 25%, 50%, 75% and high.

Press the **UP** or **DOWM** key to select the MIX6 screen.

Press "+"or"-" key to change the select volue.

Press the **MENU** key to save and return last menu

Press the **EXIT** key to not keep and return last menu