



DRV8824/
DRV8825

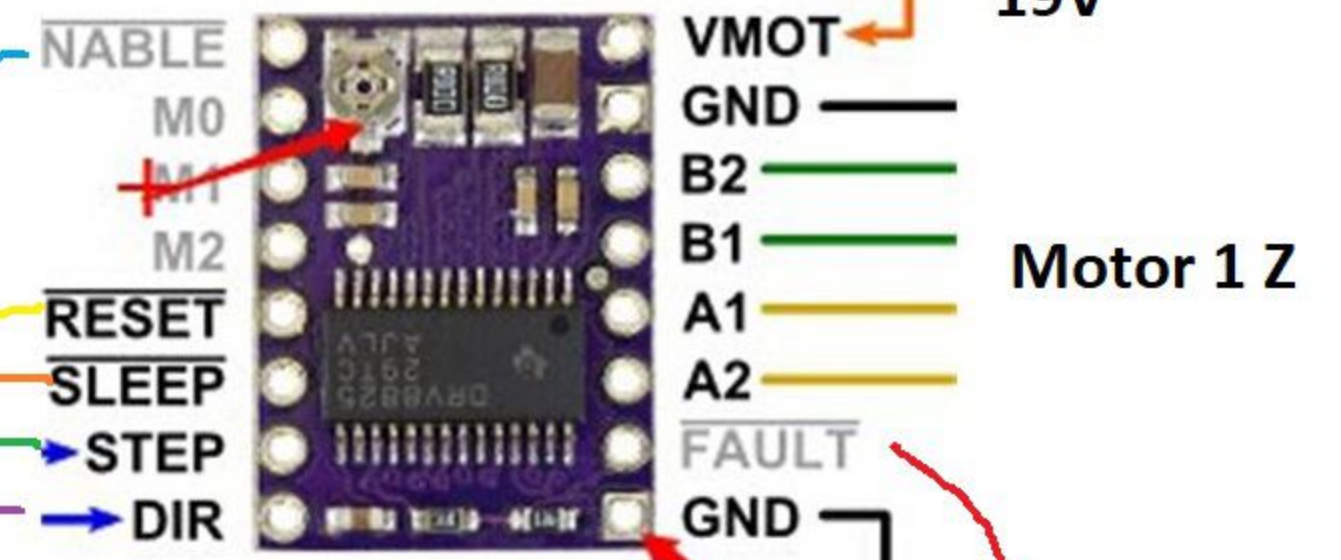

DRV8824/
DRV8825

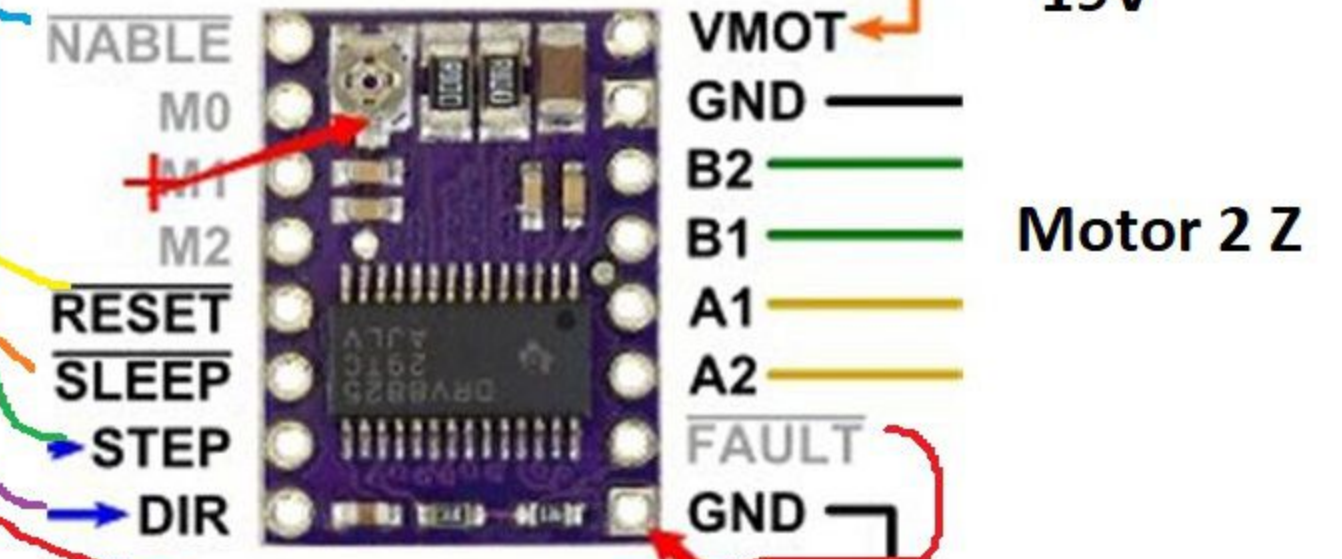

19V

Microstep Driver
DC:9-40VDC

Micro step	Pulse/rev	S1	S2	S3	S6
NC	NC	ON	ON	ON	ON
1	200	ON	ON	OFF	ON
2/A	400	ON	OFF	ON	OFF
2/B	400	OFF	ON	ON	OFF
4	800	ON	OFF	OFF	OFF
8	1600	OFF	ON	OFF	OFF
16	3200	OFF	OFF	OFF	OFF
32	6400	OFF	OFF	OFF	OFF

Current(A)	PK Current	S4	S5	S6
0.5	0.7	ON	ON	ON
1.0	1.2	ON	OFF	ON
1.5	1.7	ON	ON	OFF
2.0	2.2	ON	OFF	OFF
2.5	2.7	OFF	ON	ON
2.8	2.9	OFF	OFF	ON
3.0	3.2	OFF	ON	OFF
3.5	4.0	OFF	OFF	OFF

Terminal block labels: PWR/ALARM, ENA-(ENA), ENA+(+5V), DIR-(DIR), DIR+(+5V), PUL-(PUL), PUL+(+5V), B-, B+, A-, A+, GND, VCC.